


NOTES:

1. ALL INSTALLATION SHALL BE SUPERVISED BY A CERTIFIED ARBORIST.
2. NO MECHANIZED EQUIPMENT SHALL BE PERMITTED WITHIN CRITICAL ROOT ZONES (CRZ)
3. EXCAVATION SHALL BE NOT MORE THAN MINIMUM NEEDED TO ACHIEVE FINAL GRADE.
4. ALL EXCAVATION SHALL BE BY AIR SPADE AND/OR BY HAND AS DIRECTED BY CERTIFIED ARBORIST.
5. WORK SHALL NOT DAMAGE TREE TRUNK, LIMBS OR ROOTS TO REMAIN.

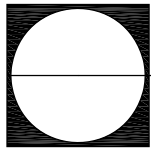

ABOVE GRADE MULCH/WOOD FIBER PATH WITHIN CRZ

311300.9NS

N.T.S.

